




**NAUTIQUE**  
SURFING • RIDING • SKIING

# Installing Nason Sensor

## 2016 to Current Model Years



# Old Sensor vs. New Sensor

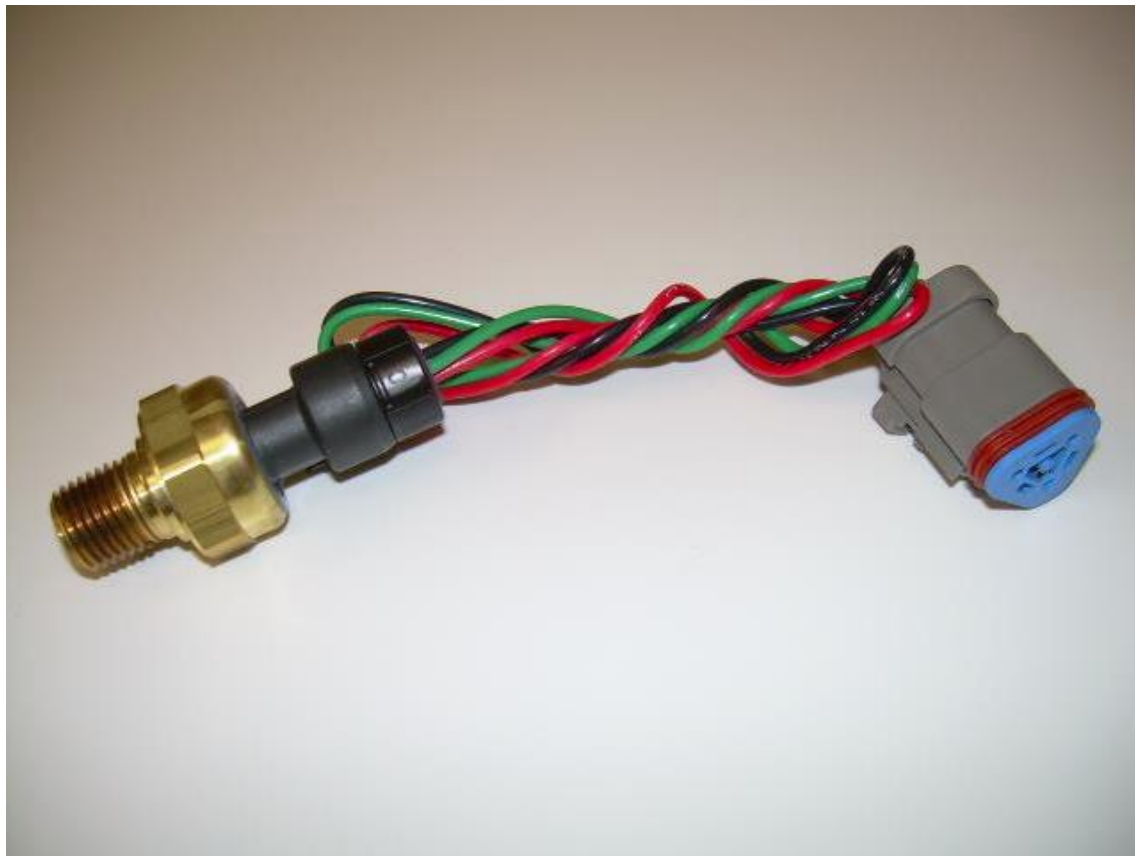

Old Sensor, Kavlico Sensor (2016-2020)



New Sensor, Nason Sensor (2020-Current)



# Step 1: Install New Sensor

- Remove the old sensor
- Install the new sensor in same location as old sensor
  - Uses same main harness connection



## Step 2: Software

- See local dealer or contact us with HIN to confirm correct software for your boat.
- Load latest software to the LINC display
- The following pages describe the different types of Linc displays



## Step 3: Navigate to Dealer Settings

- **WARNING:** By entering this area you can make changes that affect the performance, usability and features of your boat- do not proceed unless you are confident in your skill set to make changes.
- Dealer settings is code 9191
- The continuing slides show the Dealer Settings for model years current to 2016



# Step 3a: 2018-Current Dealer Settings

The screenshot displays the 'BALLAST AND BUTTONPAD SETTINGS' screen. At the top, a status bar includes icons for 'CHECK GPS', RPM, MPH, 35, ON, and USB DEVICE, along with volume controls. The main content is organized into three columns:

Ballast Timers - Fill/Drain	Ballast Senders	Buttonpad Settings
Belly - 504 / 504 Reset Belly Timers	Belly Sender Type - Nason NT41 Toggle Belly Sender Type	Fwd Bilge Pump - 5.0 A Toggle Fwd Bilge Limit
Port - 525 / 525 Reset Port Timers	Port Sender Type - Nason NT41 Toggle Port Sender Type	Aft Bilge Pump - 5.0 A Toggle Aft Bilge Limit
Stbd - 525 / 525 Reset Stbd Timers	Stbd Sender Type - Nason NT41 Toggle Stbd Sender Type	5 Digit HIN: 04001 Set BPD Master Code


At the bottom, a navigation bar shows 'SETTINGS', 'DISPLAY', and 'SYSTEM' (highlighted in red), with additional icons for FT, FUEL, and a home button.

In Dealer Settings on the left you'll see the Ballast and Buttonpad Settings tab. In this tab you'll toggle to choose which sensor is installed




# Step 3b: 2017 G & GS Series Dealer Settings

- Toggle between which sensor is installed on the left side of the LINC

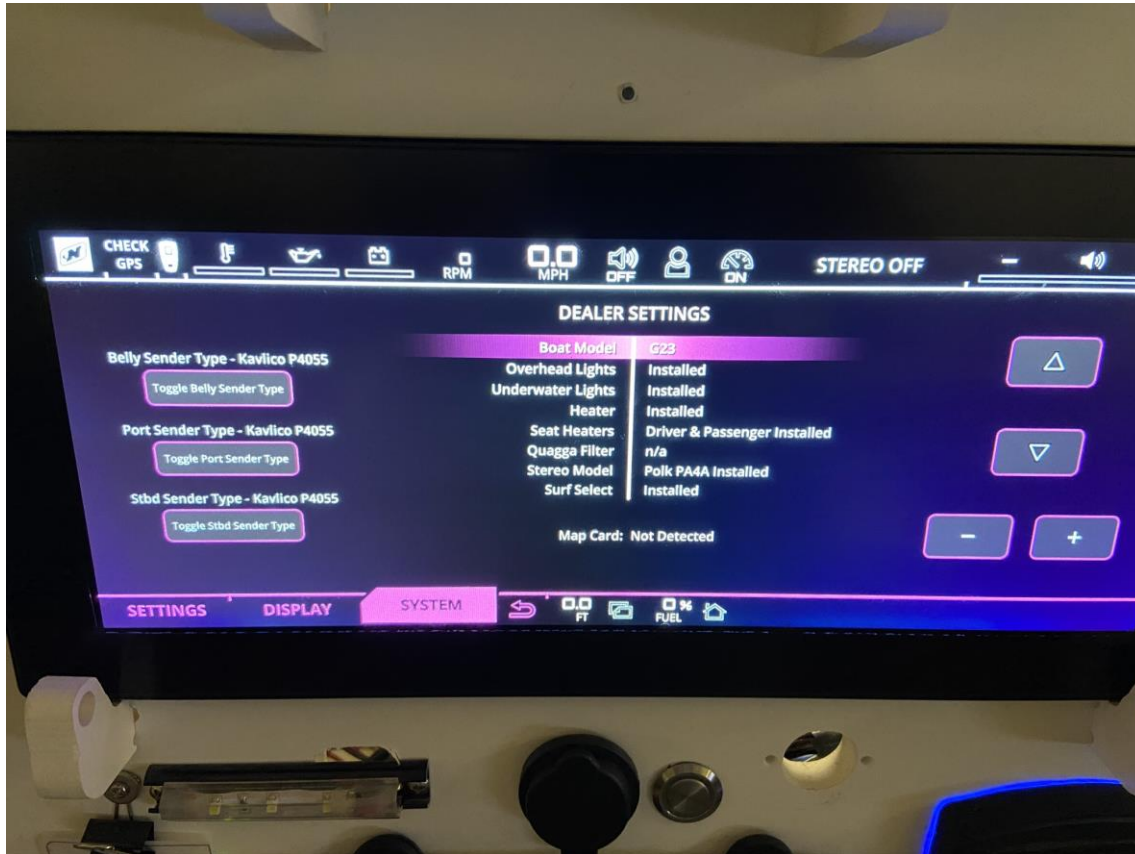



# Step 3c: 2017 & 2016 V-Drive Dealer Settings

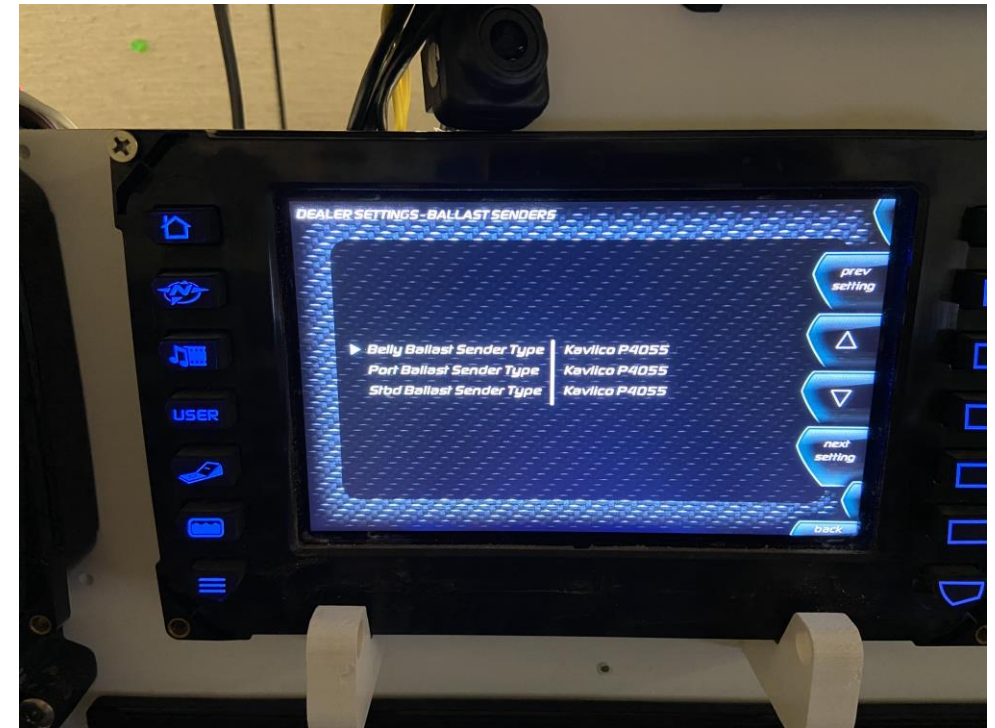

16 and 17 V-Drive dealer settings.  
Choose "ballast sender" in upper right

Once in "ballast sender" page  
choose which sensor you have





## Step 3d: 2016 G Series



- How the dealer settings on a 16 G series will look
- Choose “Ballast Sender Toggle”
- Toggle between which sensor is installed